




DO IT YOURSELF

configuration router

CONNECT THE ROUTER TO YOUR
COMPUTER WITH AN RJ-45 CABLE
OR VIA WIFI, THEN:

A log on to the device using any
Internet browser.

B in the address bar, enter the IP of the router – it is
usually 192.168.0.1 or 192.168.1.1. It is specified on
the back of the device or in the supplied manual.

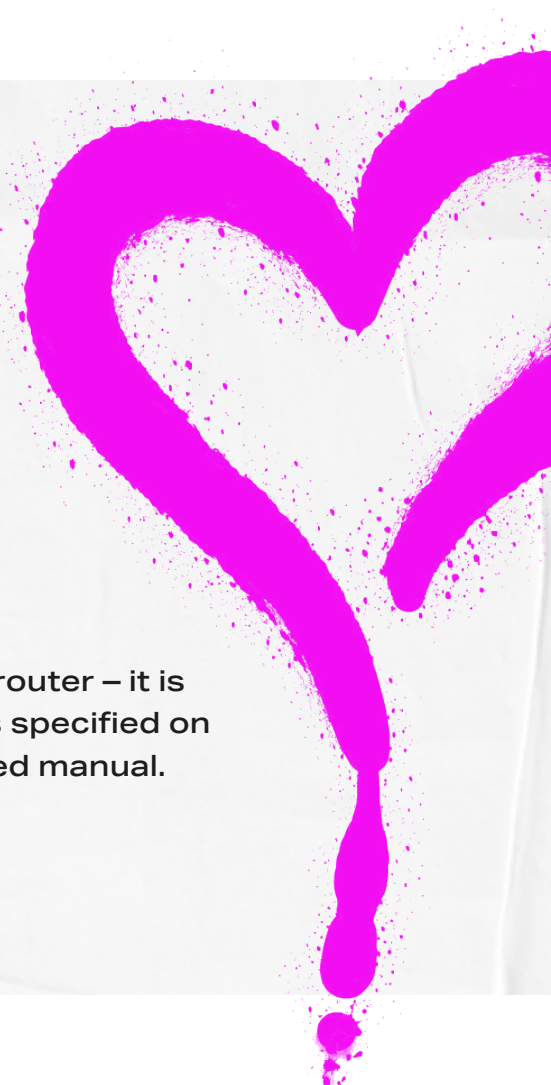

**NOTE: IF THE LOGIN DATA FROM THE MANUAL
DOES NOT WORK – YOU CAN RESTORE IT BY
RESETTING THE DEVICE. REMEMBER THAT YOU
DO THIS AT YOUR OWN RISK!**

2








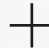
WHAT'S NEXT?

you have completed the first stage of configuration, now check:

- whether IP address fetching is automatic (sometimes also described as dynamic or DHCP),
- whether the router has MAC address cloning disabled (a prerequisite).
- the above settings should be the default, if not you can do it yourself by going to the WAN tab ("Quick setup"),
- it is also a good idea to refer to the manual provided with the router.



ADVANCED SETTINGS:

 WIRELESS	 IPV6	 ADMINISTRATION
LAN	 VPN	 SYSTEM LOG
 WAN	 FIREWALL	 NETWORK TOOLS



GRANDE FINALE

that is, access to the network

THE HARDEST PART IS OVER!
ALL YOU HAVE TO DO IS REGISTER
YOUR DEVICE AND EVERYTHING
SHOULD BE FINE! BUT LET'S NOT
GET AHEAD OF OURSELVES:

- PLUG THE **RJ-45 CABEL** FROM THE
ETHERNET SOCKET ON THE WALL INTO
THE WAN PORT – THE INPUT PORT IS
ON THE BACK OF THE ROUTER,
- OPEN YOUR BROWSER AND LOG IN TO
THE **CUSTOMER PANEL**.



TO ENTER THE PANEL:

1. ENTER THE DATA PROVIDED IN YOUR AGREEMENT.



2. IN THE PANEL, CHOOSE >REGISTER THE DEVICE<.



3. ON THE LEFT, SELECT YOUR DEVICE FOR REGISTRATION.



4. CHOOSE >ACTIVATE THE DEVICE<



5. WAIT 10 MINUTES (REFRESH TIME AND ALLOCATION OF A NEW IP ADDRESS).



6. DONE!*



***AFTER REGISTRATION IS COMPLETE, YOU GET A MESSAGE ASKING YOU TO REBOOT THE ROUTER – ONCE YOU'VE DONE THAT, YOU SHOULD HAVE ACCESS TO THE NETWORK!**